


Follow these simple steps to connect the icomfort Wi-Fi™ and enable remote features.



SIMPLE INSTRUCTIONS:

1. Touch the wireless icon at the bottom left of the home screen 
2. Begin the registration process by touching "Wi-Fi enable"
3. Press the network settings button to select your home wireless network
 - a. Select your network from the list of available networks or enter it manually
 - b. Enter your wi-fi password
4. Touch "Register", then enter your email address (twice)
5. An email will be sent to the email address you provided; open the email and click the link to confirm your registration
6. Setup your icomfort Wi-Fi account
7. Access your icomfort Dashboard or log on directly at www.myicomfort.com for account access, alerts and reminders, plus remote monitoring and control



ONCE ON THE LENNOX® ICOMFORT™ DASHBOARD, CUSTOMERS CAN USE THESE POWERFUL FEATURES:



- 1 My Account** – Used to view or edit account information
- 2 Home(s) Tab** – View current status and temperature for each installed thermostat
- 3 Current Indoor Temperature and Indoor Humidity** – Check and change temperature or humidity settings with one touch
- 4 Away Mode** – Select energy-saving mode with a single button
- 5 Program** – Select predefined settings for specific seasons, or control the thermostat yourself with manual mode
- 6 Forecast** – View your five-day weather forecast
- 7 Alerts and Reminders** – View alerts and reminders informing you of any needed service or maintenance
- 8 Dealer** – Edit dealer contact information for every icomfort Wi-Fi™ thermostat you own, or email your dealer with any questions or comments
- 9 System** – View or edit system information for your thermostat, including installed components